



**WIRING DIAGRAMS**

All wiring diagrams show connections for 3 wire fan control:  
 U1: Controlled Live out to fan run winding  
 U2: Neutral out to fan  
 Aux: Maintained live out to fan capacitor

Where fan is 2 wire control (I.E. Only Live and neutral at fan terminal box omit connection Aux-CAP). If in doubt seek fan manufacturers advice

Only reduce the speed of your fan by around 50%  
 To prevent overheating of fan, check the amp draw does not exceed that shown on the label when running at minimum speed

SPECIFICATION		POLE STAR PRODUCTS LIMITED		
Motor	Speed (RPM)	Bearings	Ball	
Voltage (V)	Motor Protection	Weight (Kg)		
Frequency (Hz)	Insulation Class	Noise dB(A)		
Power In/Out (W)	Protection Class			
Current (A)	Capacitor (MF)			

**POLE STAR**  
 PRODUCTS LIMITED

POLE STAR PRODUCTS LIMITED	
Product Code	<b>PSVSC-EFSC3</b>
Projection	A4
Angle ± 3°	Scale: Sheet: 1 of